

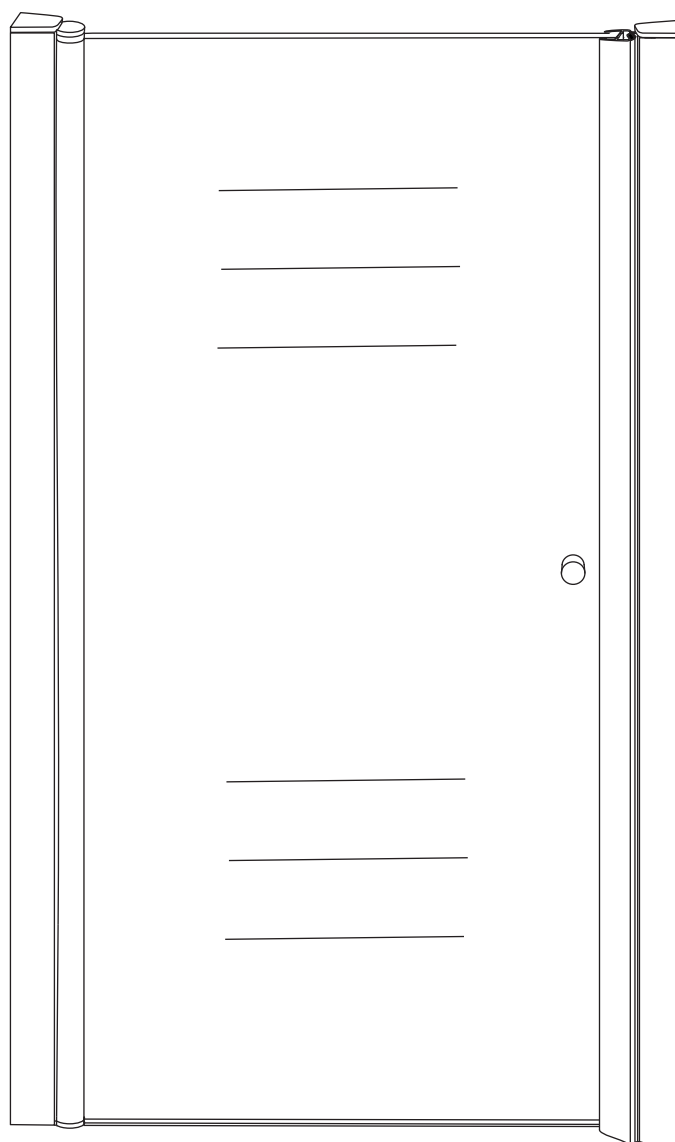


INSTALLATION MANUAL

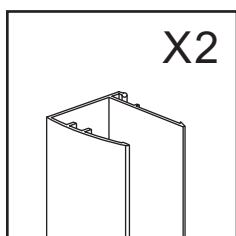


CR043-80
CR043-90
CR043-100

RoHS **CE** ISO9001:2008

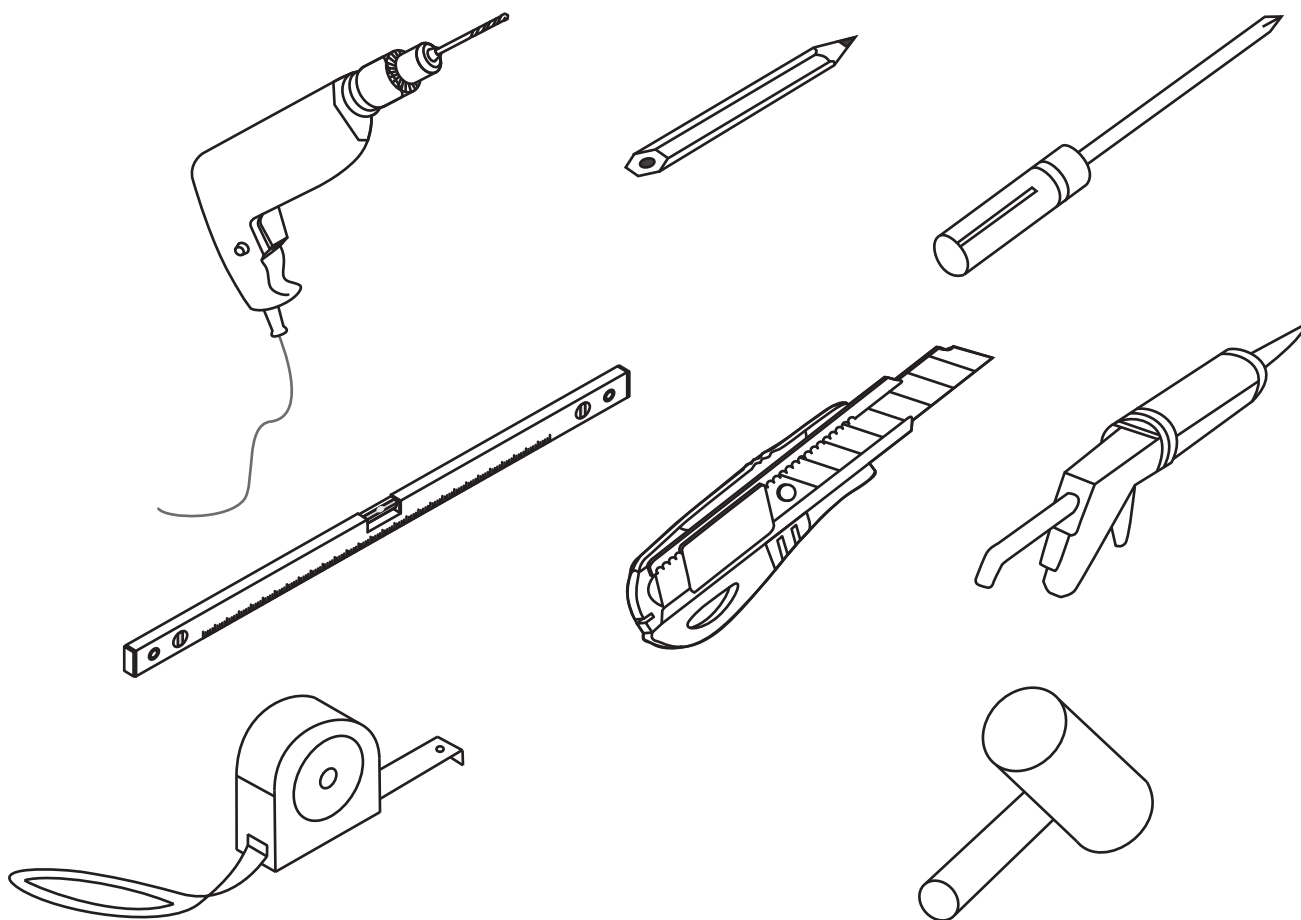


X2

KQ-07

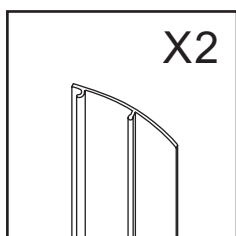


X2

BB-04

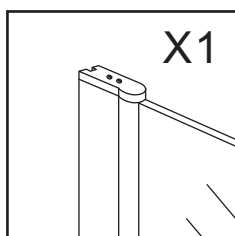


X1

GLASS

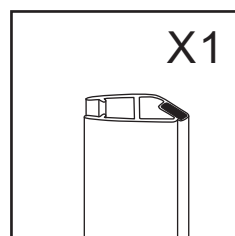


X1

6FX-2A

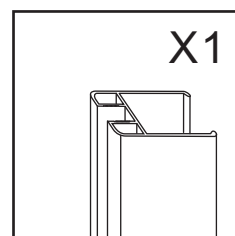


X1

LJ-09

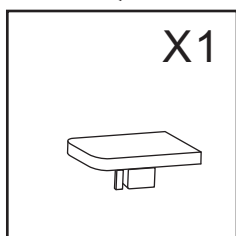


X1

PJ-4509

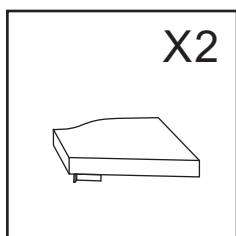


X2

PJ-4514
PJ-4515

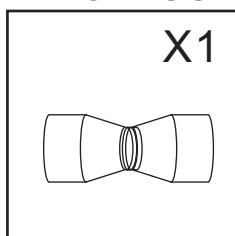


X1

LS-1201

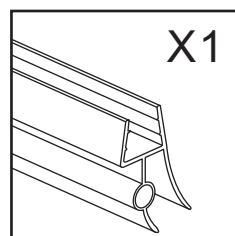


X1

6B-6-18

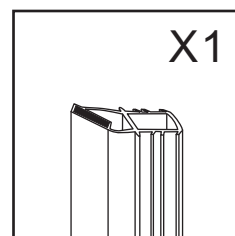


X1

8mm inner magnet

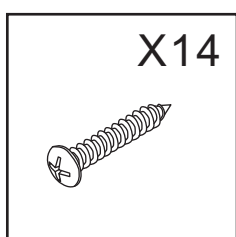


X14

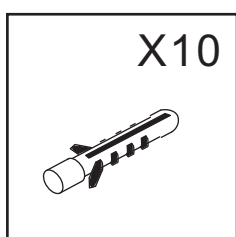


X10

PJ-4606

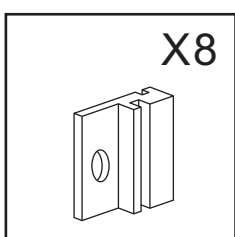








X8

PJ-4729

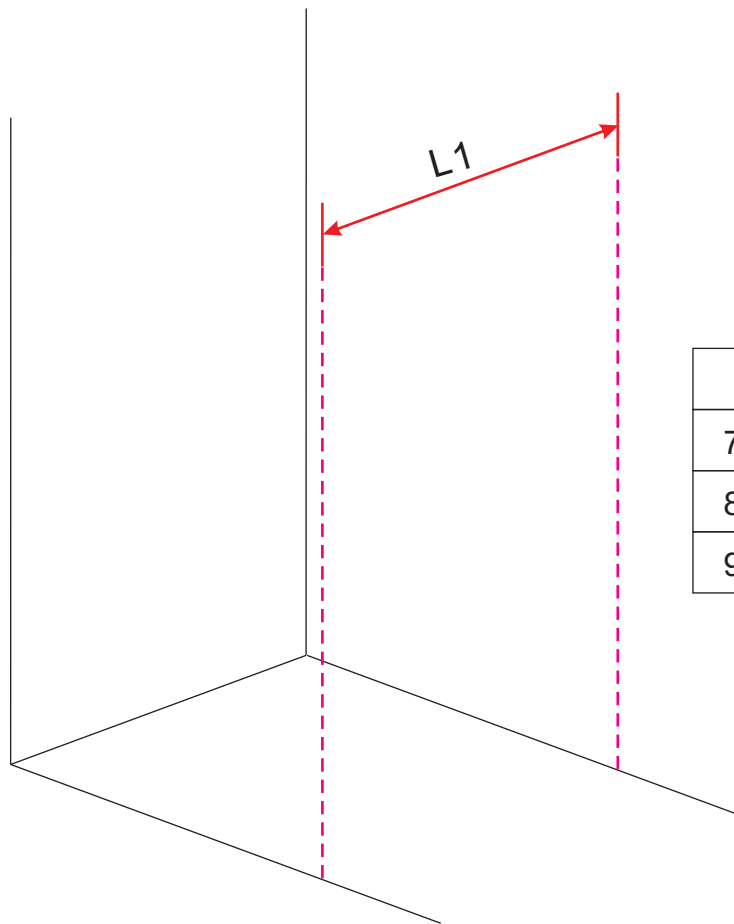


SIZE	L1
770-810x1900	770-810
870-910x1900	870-910
970-1010x1900	970-1010


Install the wall profile: according the line to install the profile notice:put the profile in middle of line

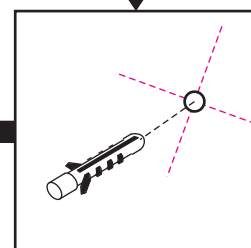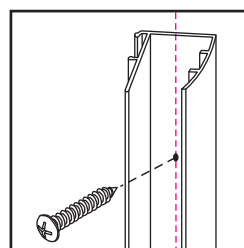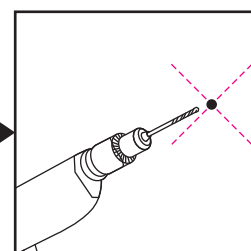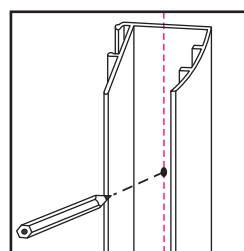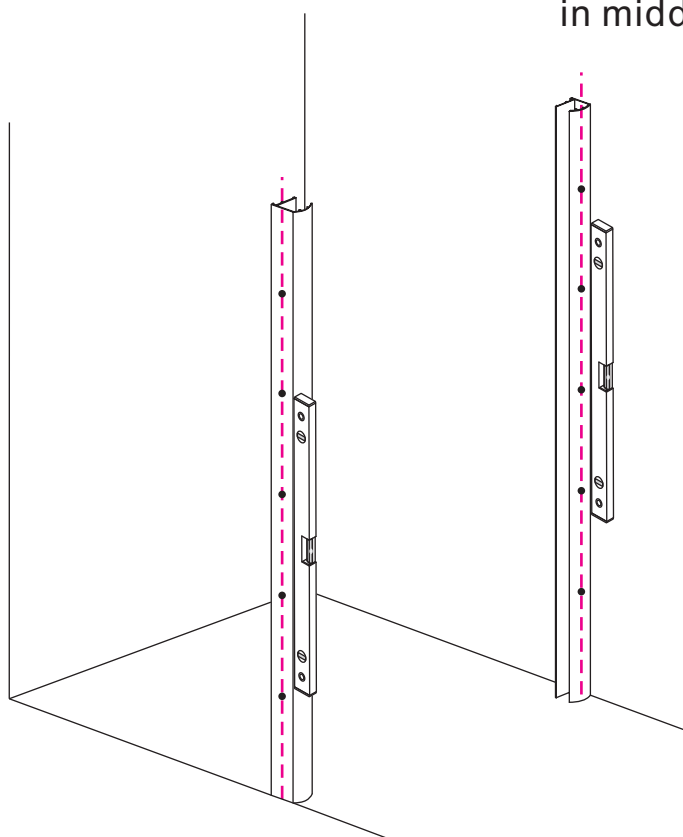


As the picture shows insert the magnetic stripe into profile attention please the put the magnetic stripe side outside.

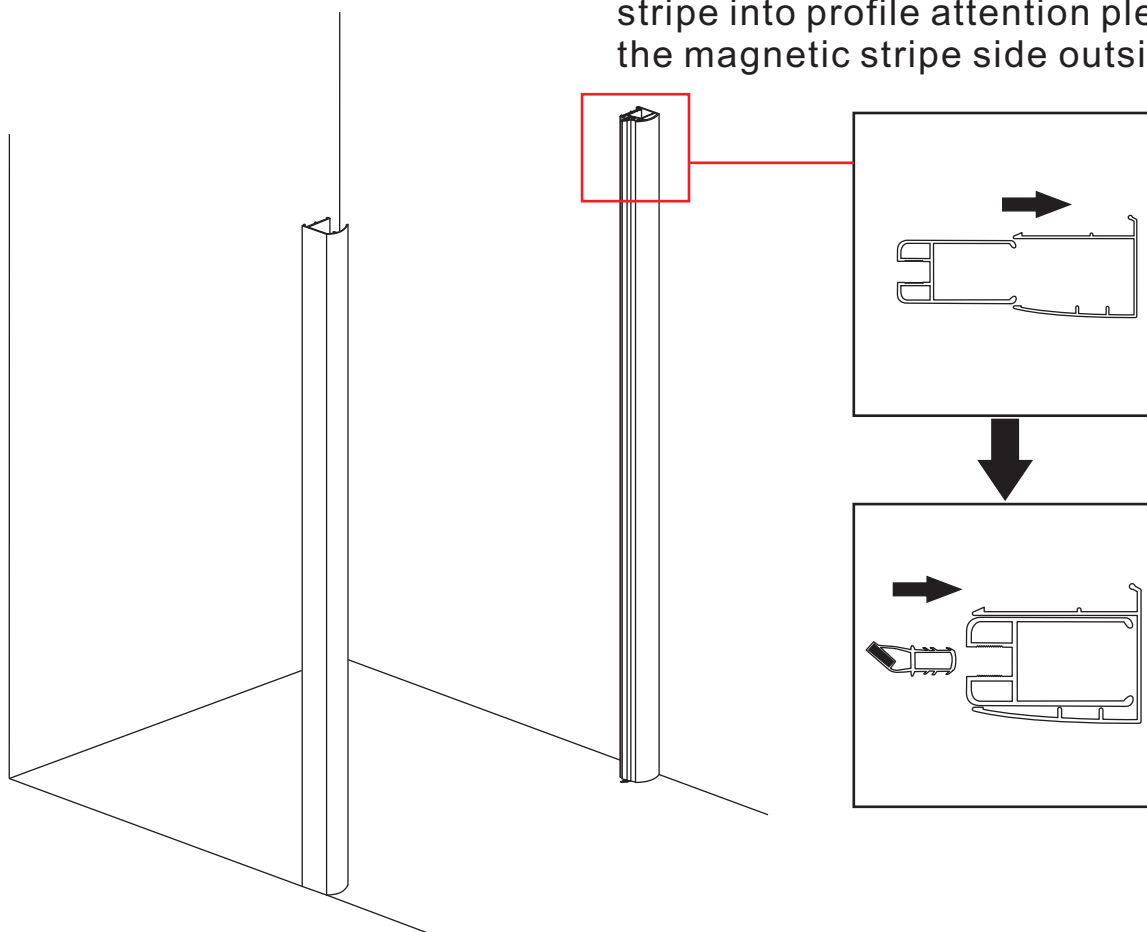


Install the water-proof gasket.

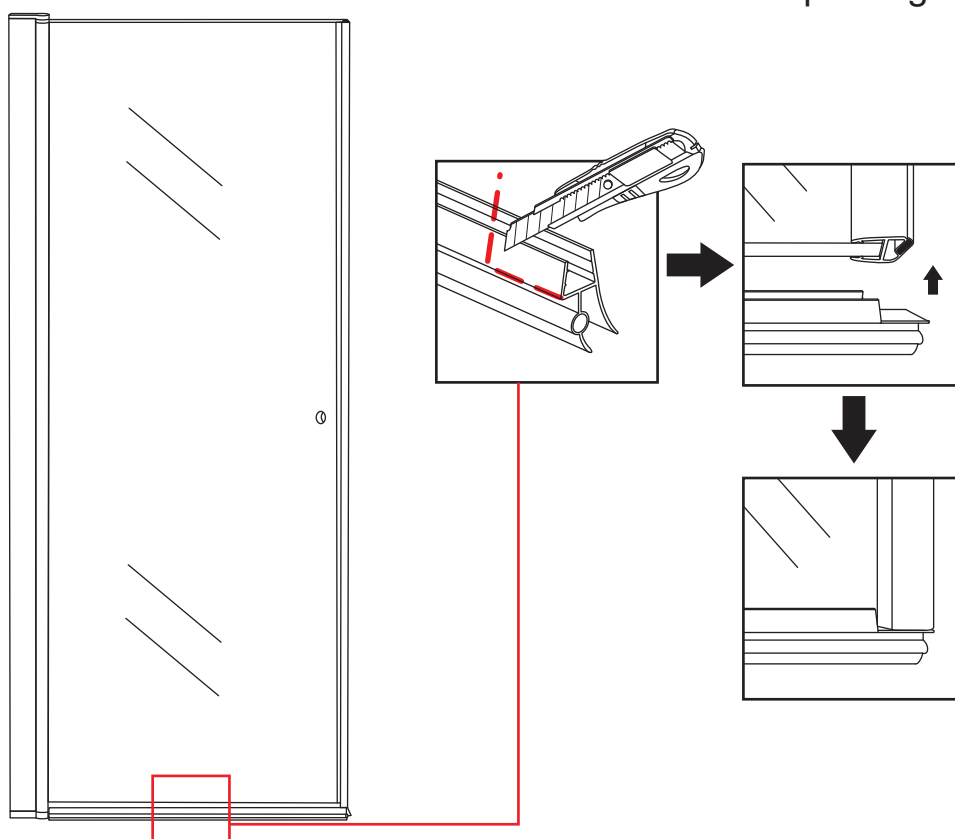


Install the door glass: insert the door glass into profile, then install the magnetic stripe.

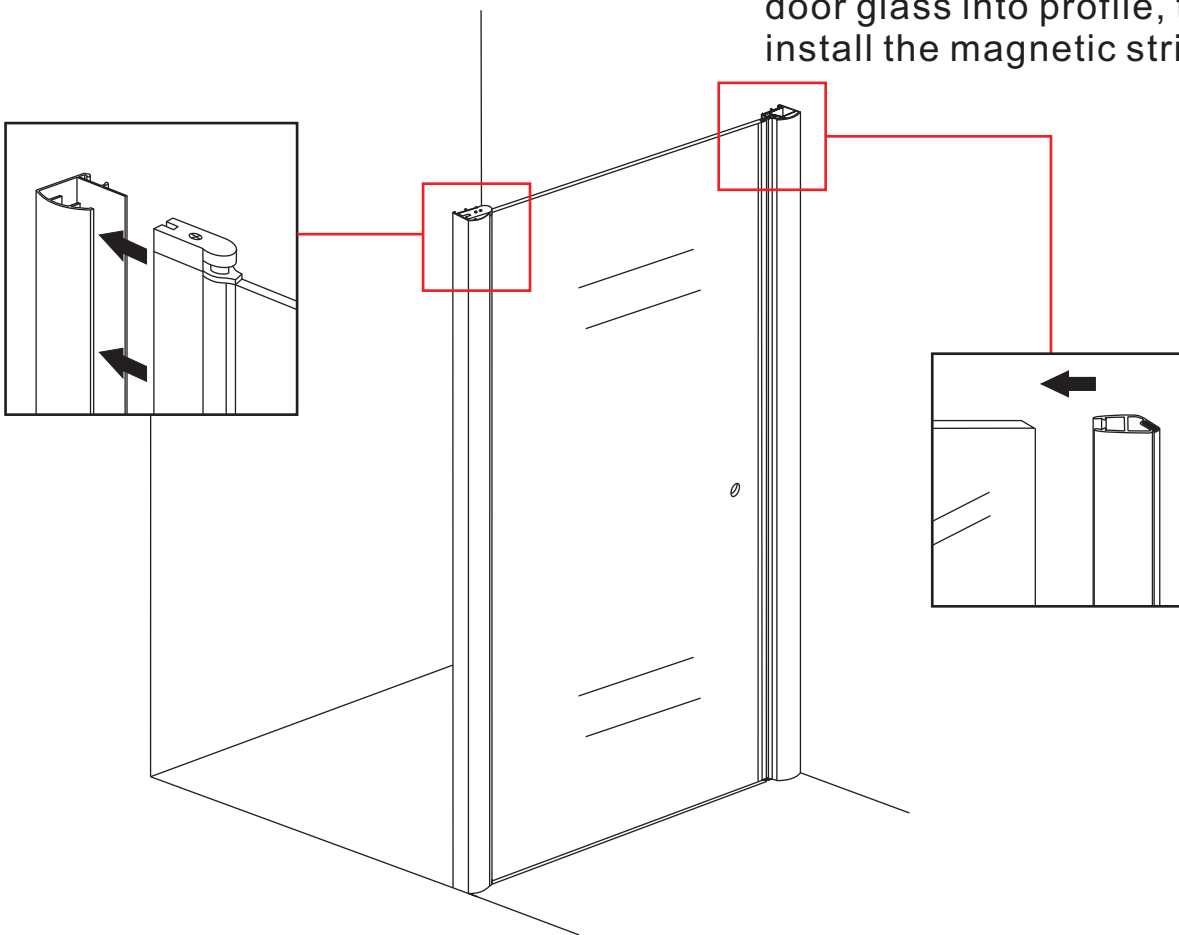

Install the decorate profile: install the connect buckle, insert the decorate profile into buckle as picture shows, then install the top decorate cap.

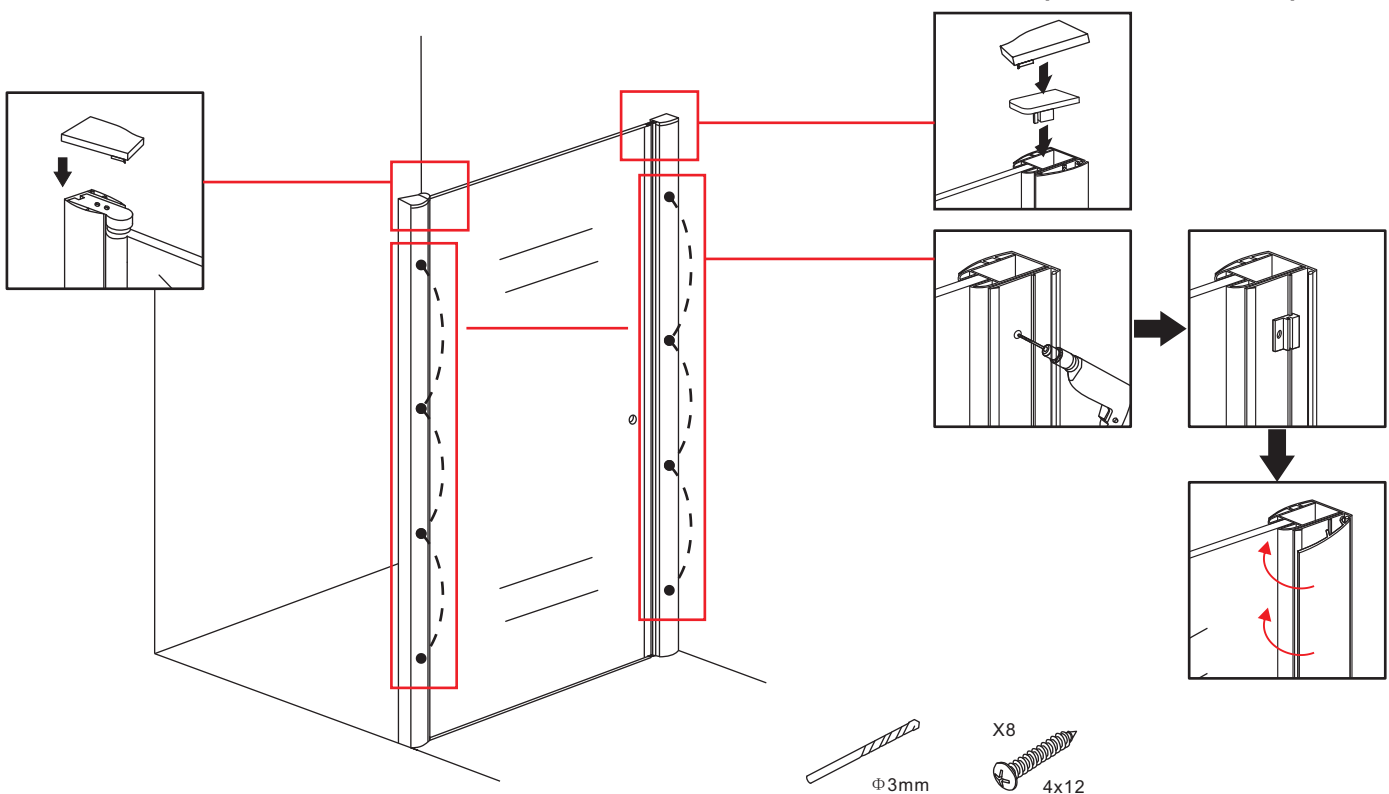

Intall the handle.

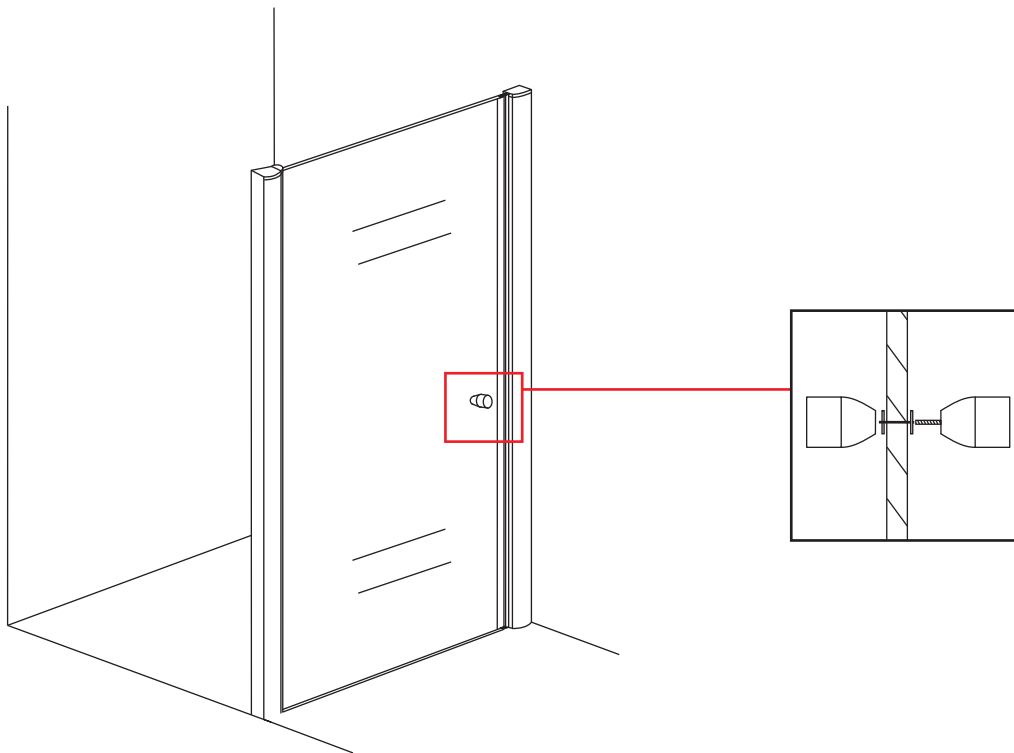

take the glue, please keep dry until 24 hours.

