

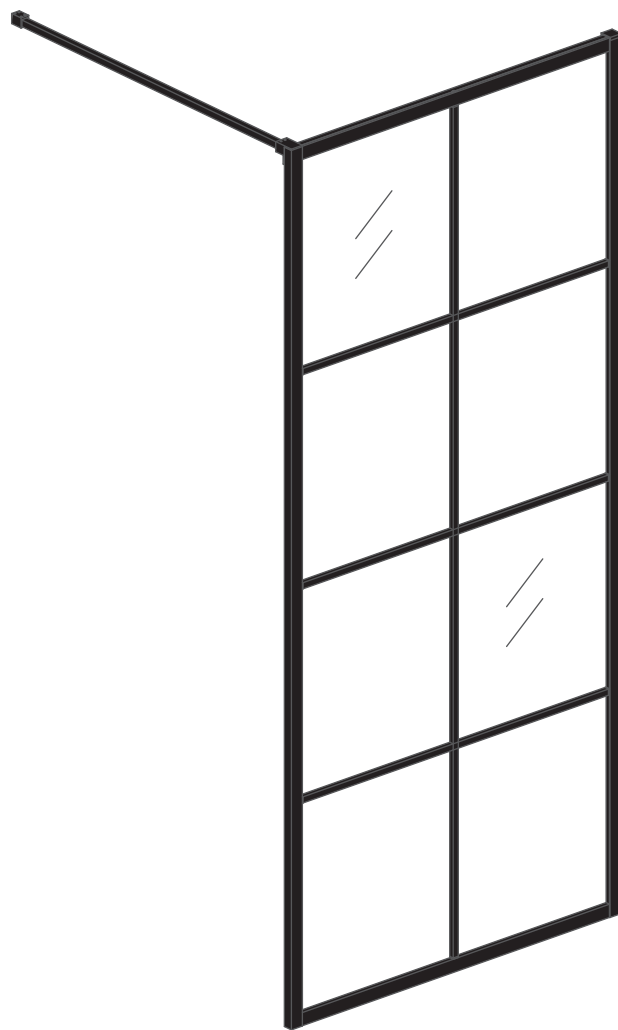


INSTALLATION MANUAL

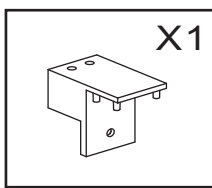


BEKO80/BEKO90/BEKO100
BEKO120/BEKO140

RoHS **CE** ISO9001:2008

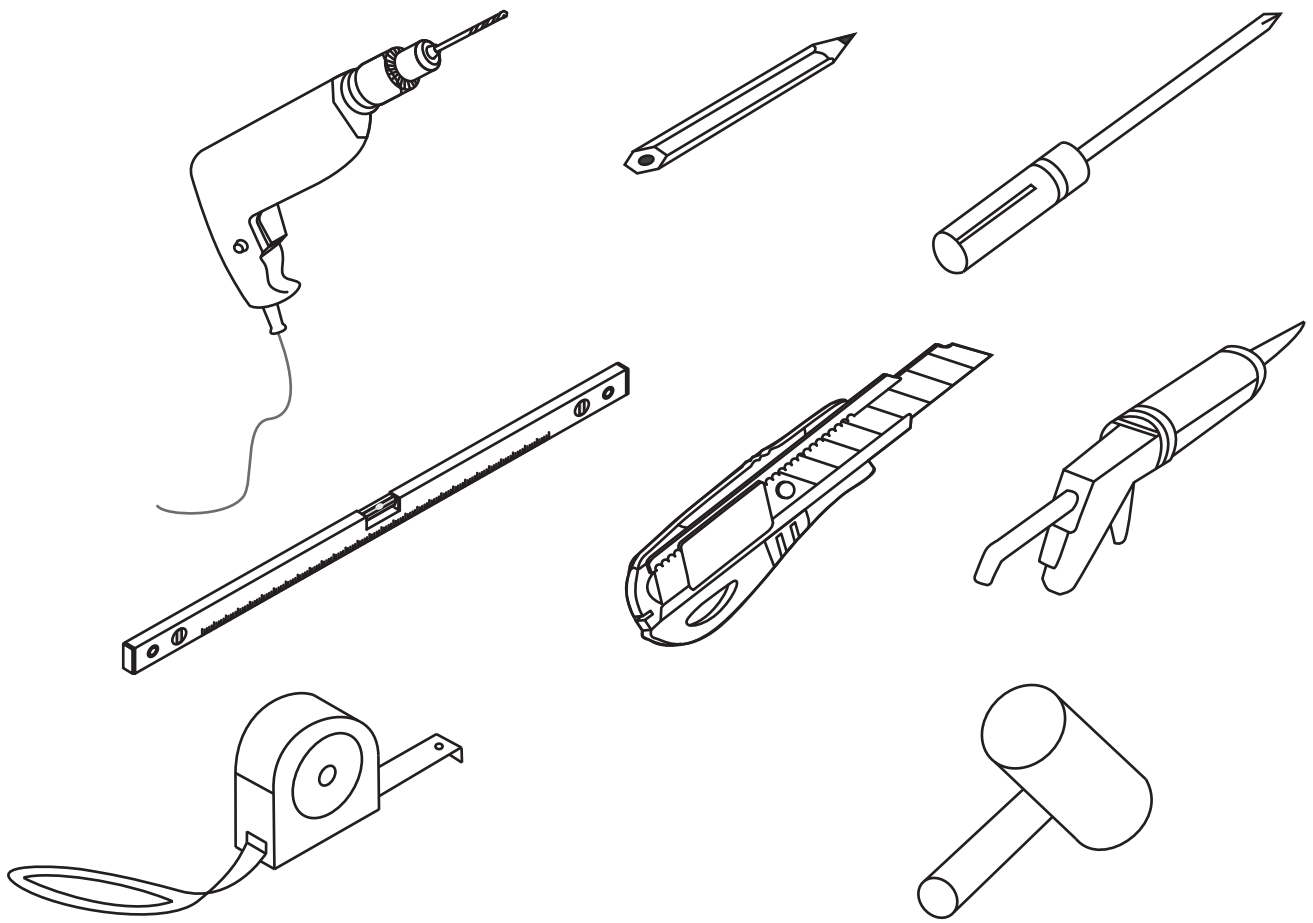


X1

PJ-4230

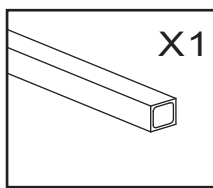


X1

LG-04

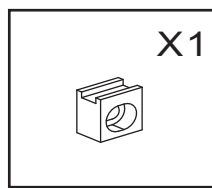


X1

PJ-4207

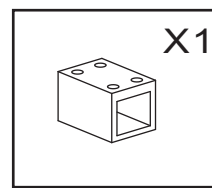


X1

PJ-4206

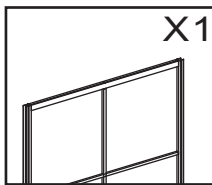


X1

GLASS

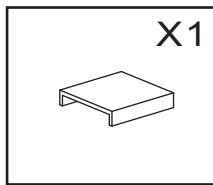


X1

KQ-47cover

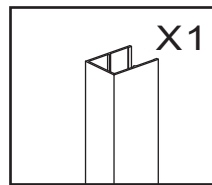


X1

BK-25

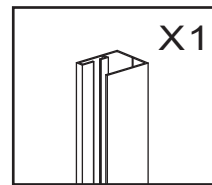


X1

KQ-47

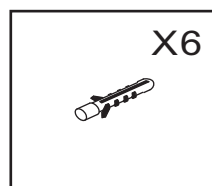


X6


PJ-4606

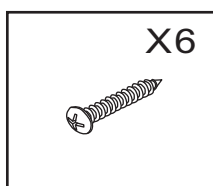

X6

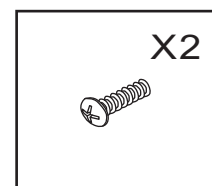


X2

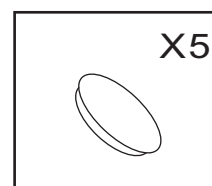





X5

Drawing the install size.

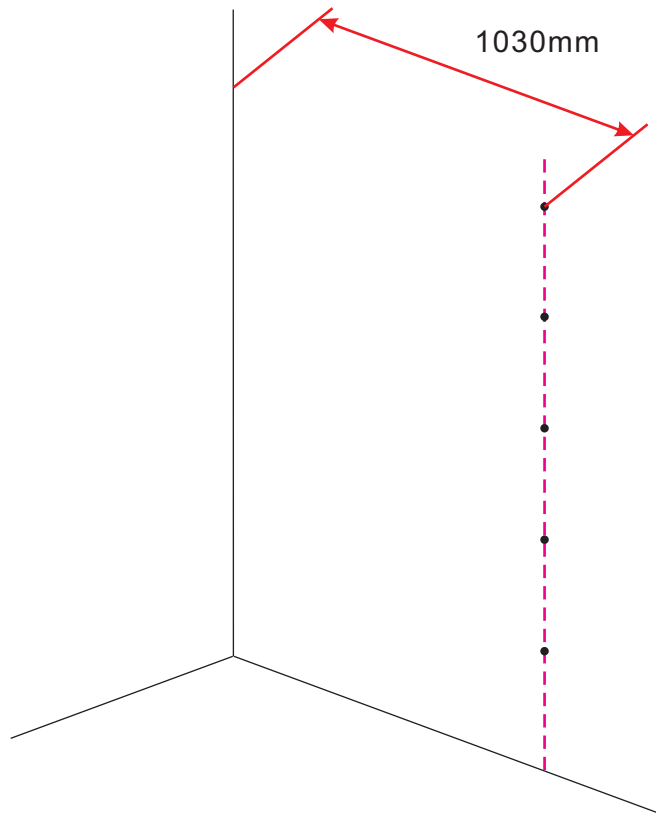


1

Install the wall profile.

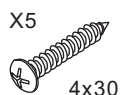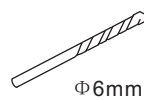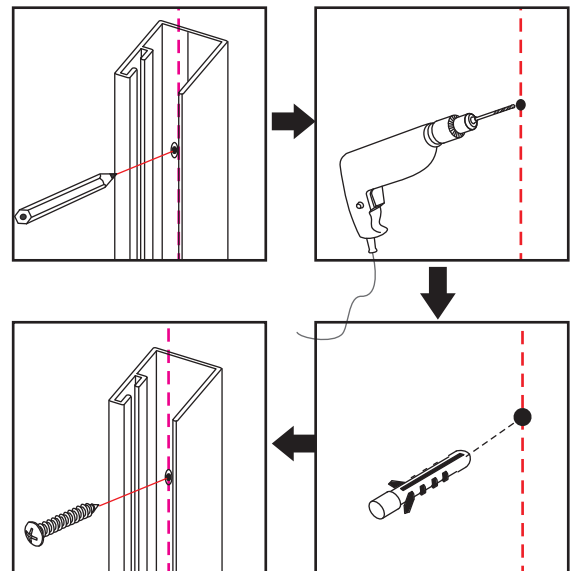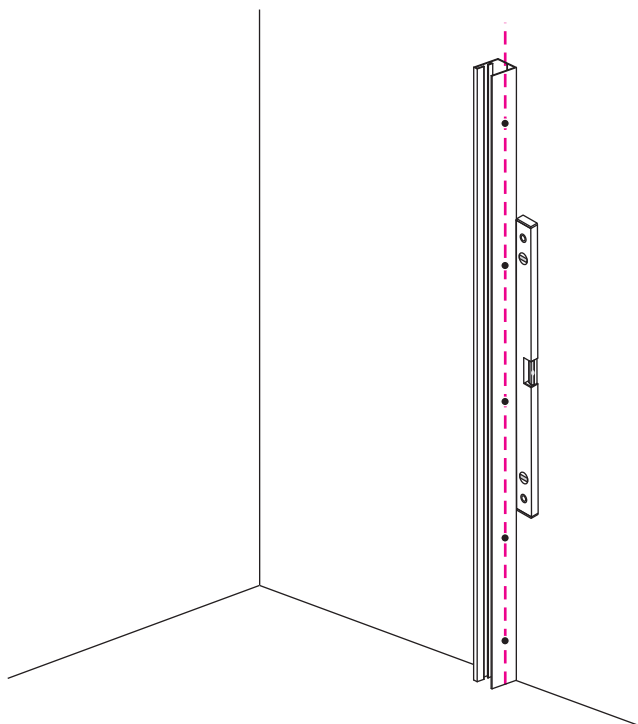


2

Install the fixed glass.

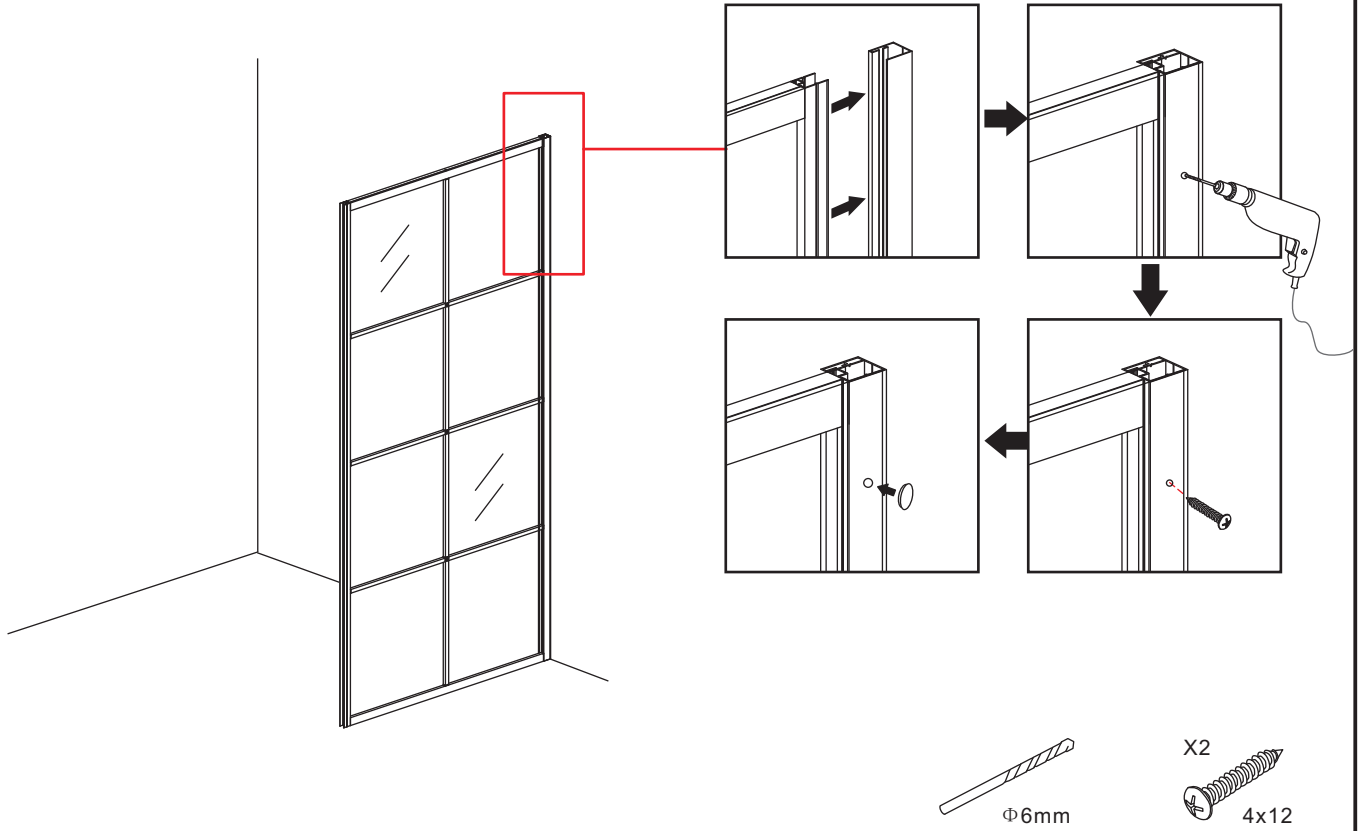


3

Install the frame profile of broadside fixed glass.

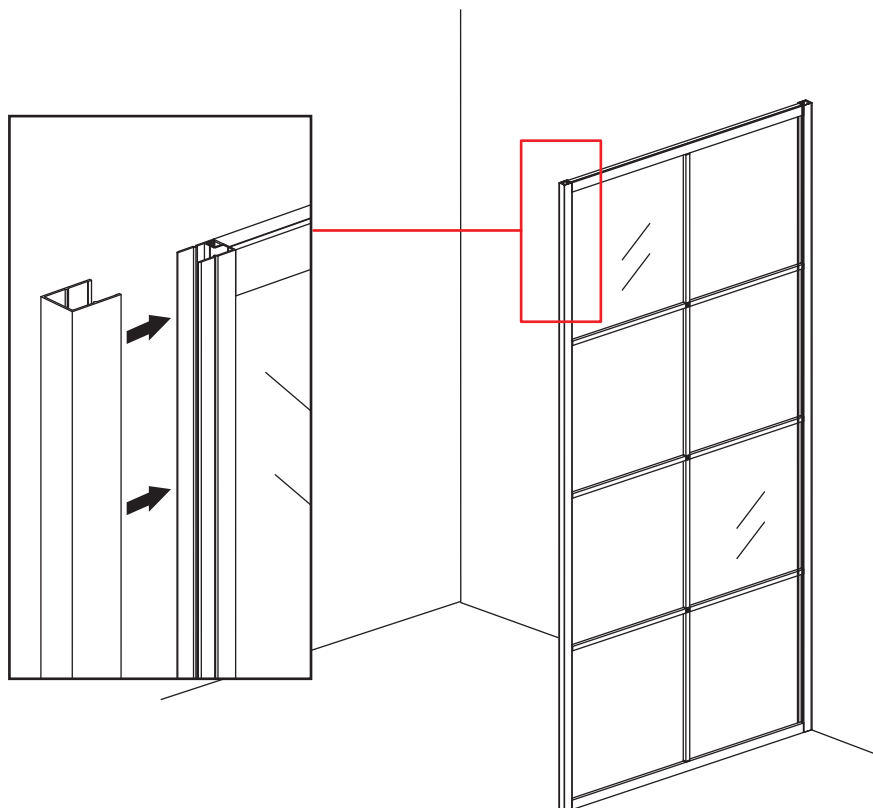


4

Install the top decorate part.

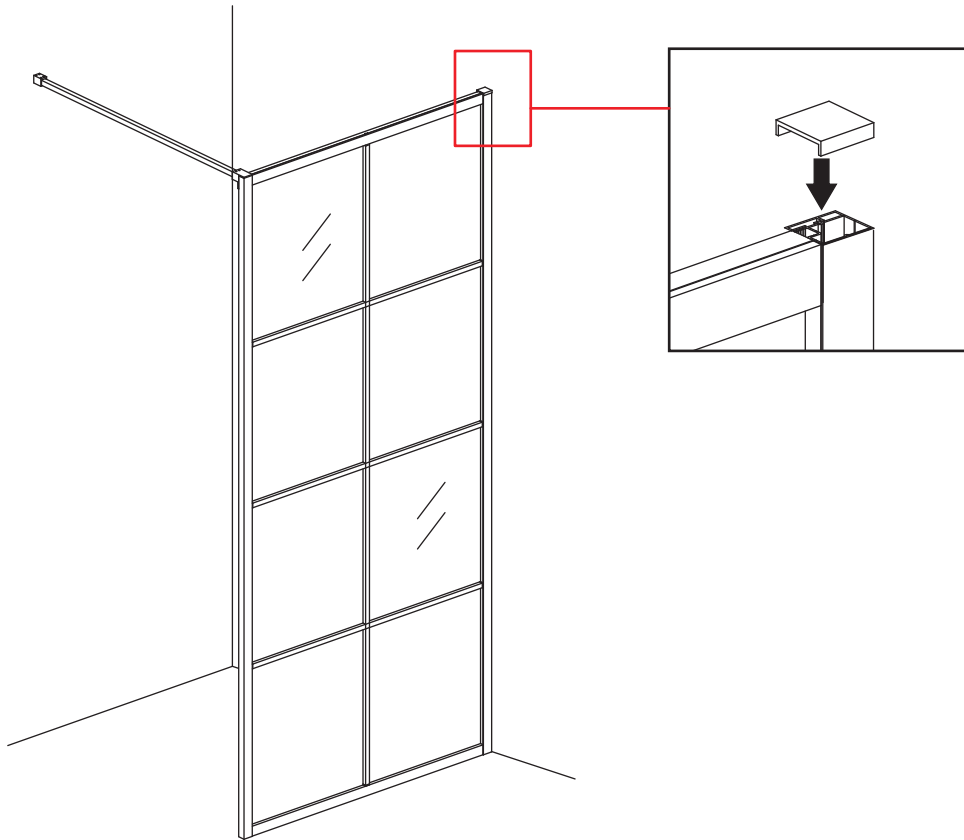

7

Make the glass gel then make sure without shower in 24hours.

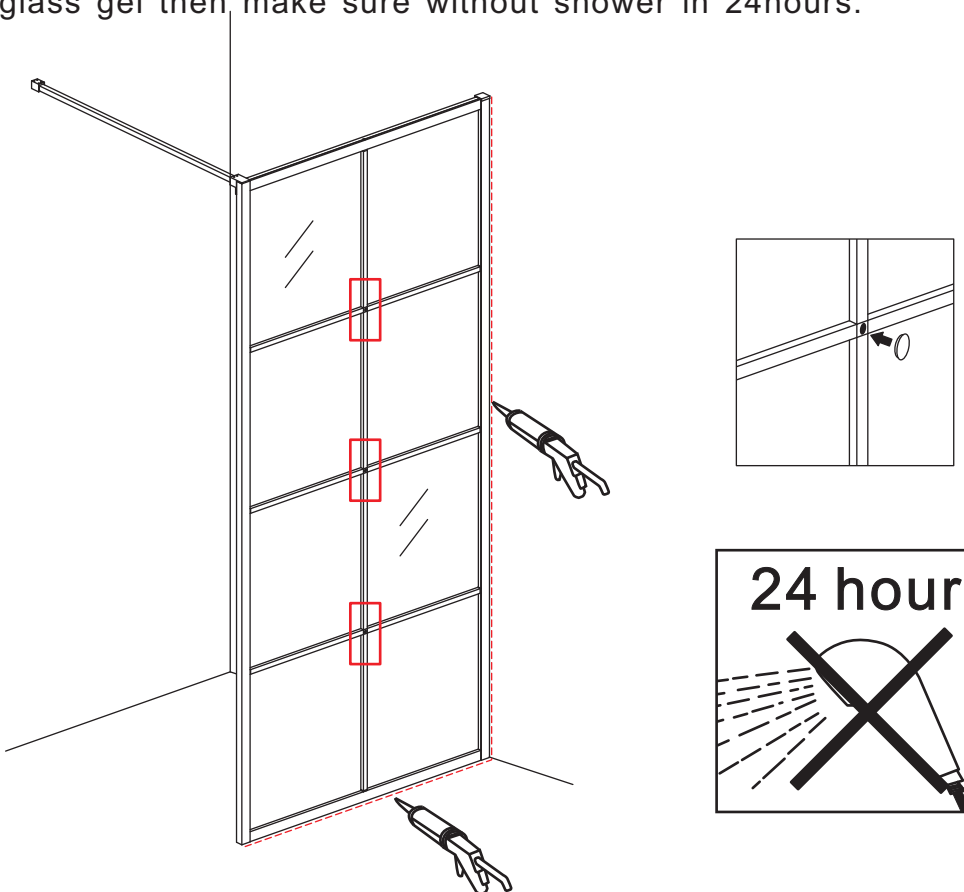

8